



GatorMade Trailer Operation & Safety Manual & Warranty

Following these procedures after purchasing a new GatorMade Trailer will insure safe and responsible operation and provide you with the necessary maintenance requirements of your new equipment.

Initial Checklist :

- Make sure trailer coupler correctly matches the ball size on towing vehicle.
- Connect light plug securely to ensure that all lights are operational.
- Check lug nuts for tightness and tire inflation after 10-20 miles of operation.



WARNING READ Prevent Personal Injury & Equipment Damage.

When Towing Do the Following: *(Check daily or each time trailer is used)

- Check vehicle hitch, ball, and coupler for wear or damage. Replace Needed parts!
- Use towing hitch of proper height to ensure trailer frame is parallel to road.
- Secure Trailer hitch to hitch ball with lock lever in lock position.
- Attach safety chains to proper receptacle in a cross - under fashion so tongue will be cradled in case of disconnect.
- Inspect tires for blemishes and proper inflation.
- Check all trailer & towing vehicle lighting.
- Check trailer brakes and towing vehicle brakes.
- Load trailer evenly from front to back as well as side to side & secure load to prevent shifting or loss.
- Check tires for recommended inflation.
- DO NOT EXCEED Trailer Gross Vehicle Weight (GVW).
- Check for loose or missing lug nuts, Replace as needed.
- Re-Check ball & hitch tightness after towing 50 miles.
- Repack wheel bearing at 2,000 mile intervals or when needed. (Heavy loads under hot conditions may require a shorter interval of repacking)
- Do not operate at unsafe speeds. This is determined by the LOAD & Road conditions, not necessarily the posted regulated speed.

Failure to comply with the aforementioned procedures can result in personal & material damage and could void any stated warranty made by GatorMade or any of it's distributors or affiliates. This will be determined by GatorMade personnel and any decision made will be final and conclusive.